

Optional Items for the NJ Series

The parts listed below are interchangeable. When you change screws, also change the parts listed below according to the model number and nominal screw diameters.

■ RAIL

Rail	Nominal Screw Diameter	Width of Rail Groove A (mm)	Depth of Rail Groove D (mm)	Model
R14	Φ1.4	1.5 – 1.7	10	NJ-12
R17	Φ1.7	1.8 – 2.0	10	
R20	Φ2.0	2.1 – 2.4	18	NJ-23
R23	Φ2.3	2.4 – 2.7	18	
R26	Φ2.6	2.7 – 3.0	18	
R30	Φ3.0	3.1 – 3.4	18	
R35	Φ3.5	3.7 – 4.0	18	NJ-45
R40	Φ4.0	4.1 – 4.4	18	
R50	Φ5.0	5.1 – 5.4	18	



■ Passage Plate



Passage Plate	Nominal Screw Diameter	Width of Rail Groove A (mm)	Depth of Rail Groove D (mm)	Model
W1217	Φ1.4	3.5	1.1	NJ-12
	Φ1.7			
W2320	Φ2.0	4.0	1.5	NJ-23
W2323	Φ2.3	4.5	1.7	
W2326	Φ2.6	5.0	1.9	
W2330	Φ3.0	6.0	2.2	
W4540	Φ3.5	7.0	3.0	NJ-45
	Φ4.0			
W4550	Φ5.0	9.2	3.0	

■ Holding Plate (Screw Guide 1) for Flat and Round Head Screws

Holding Plate	Nominal Screw Diameter	Slit Width A (mm)	Model
G2320	Φ2.0	2.7	NJ-23
	Φ2.3		
G2326	Φ2.6	3.8	
	Φ3.0		
G4540	Φ3.5	5.4	NJ-45
	Φ4.0		
G4550	Φ5.0	6.5	

